


Routine Gate Adjustment Instructions


Due to expansion and contraction with the weather, your gate will require occasional adjustments to maintain smooth operation.

- A. To adjust a sagging gate, or to shift panel in the opening, loosen the hinge nuts with an 11/16" wrench.
- B. Loosen or tighten the nuts in the direction shown. Lift or push panel to slide the hinge.
- C. Retighten the hinge nuts.


Shift panel left

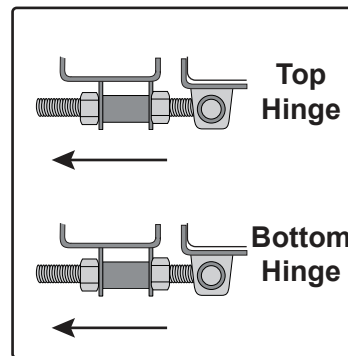


Shift panel right

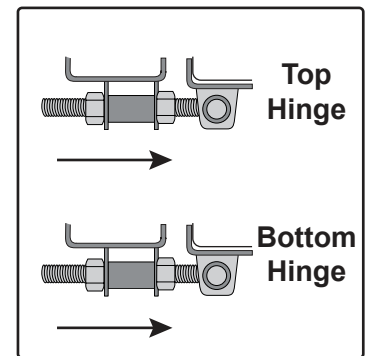

Raise latch side

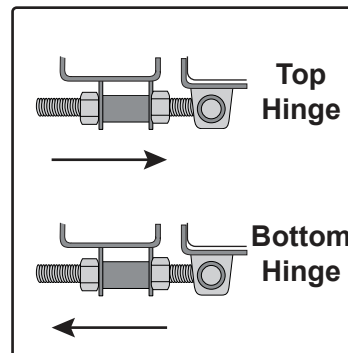

Lower latch side

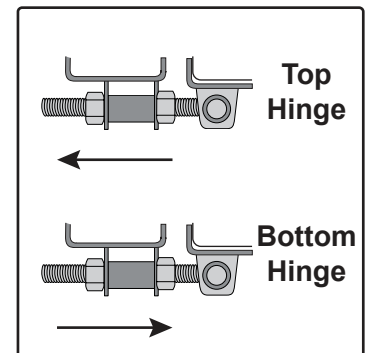

If there is no more adjustment available due to a sagging post, you can cut your top rail and shift the post over to regain some play.

